

Simple Band Positioner & Pre-Crimper Model SP




www.blockwise.com


Model SP Simple Band Positioning & Pre-Crimping Machine allows quick and easy, manual positioning and pre-crimping, of marker bands. The hand-operated band pusher slides a band into position against the band stop then crimps the band into a triangular shape. Integrated band loading groove makes loading small bands fast and easy.



- Simple & Quick manual positioning method
- Lowest cost solution
- No electronics or pneumatics; excellent reliability
- Band positions set just once using standard caliper
- One operator can manage both positioning/pre-crimping & Swaging

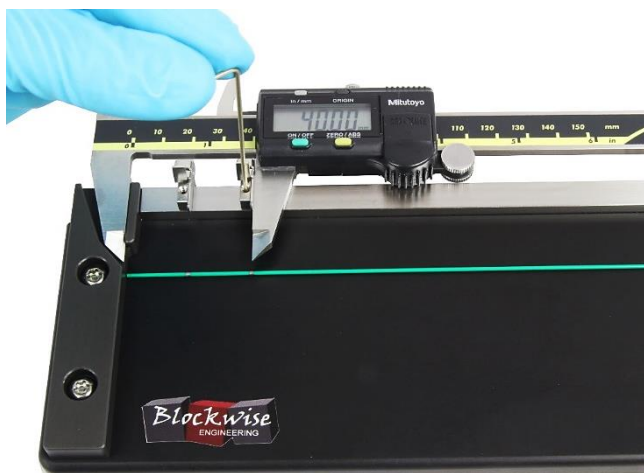

Band stops are set with a caliper then locked into place with a setscrew for repeatable band positioning

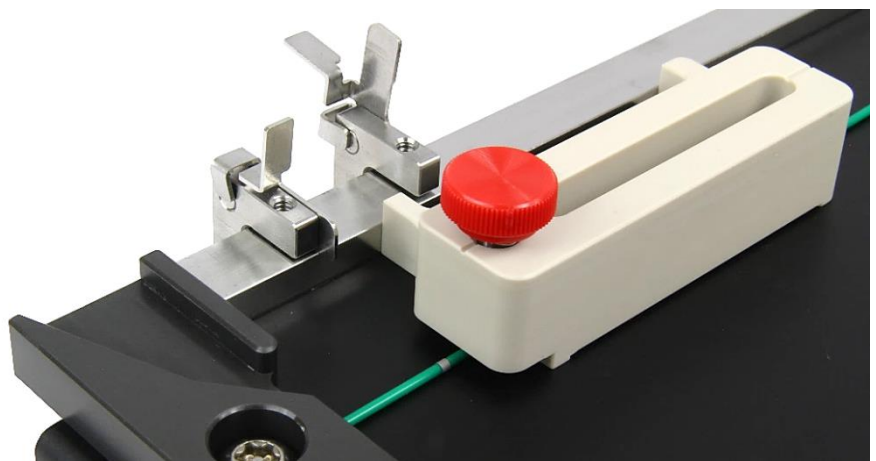

Band stops are set with a caliper then locked into place with a setscrew for repeatable band positioning